

UV-3710

<http://www.gigahertz-optik.de/en-us/product/UV-3710>

Product tags: UV



Description

The spectral responsivity range of the model UV-3710 covers the UV-A range from 320 nm to 400 nm.

General Purpose UV Radiation Measurement Detector

The UV-37 series of UV radiometric detectors are primarily used for spectral broadband irradiance measurements within a defined spectral range of polychromatic radiation. Optical filters are used to shape the bare photodiode response to the desired spectral bandpass. The computer aided optical filter design produces the best possible broadband radiometric response within the spectral sector specified.

Pre-aged Components

All optical and optoelectronic components of the UV-37 detectors are UV Radiation pre-aged for Long time stability.

Cosine Field-of-View

A cosine F.O.V. characteristic of the detectors spatial responsivity is effected by the diffusor window of UV-37 detectors.

Designed for Wide Dynamic


The UV-37 detectors are designed for the highest possible irradiance sensitivity for low irradiance level applications. However the wide range linearity of the photodiodes coupled with the Gigahertz-Optik optometers's wide dynamic signal range amplifiers enable the UV-37 series detectors to be used in applications with high irradiances as well. The upper range is limited only by the detector maximum operating current and its specified operation temperature.

Compact Housing

The UV-37 series irradiance detectors are built in a compact 37mm diameter black anodized aluminum housing. The shadow ring around the diffusor support the wide-angle cosine response. A side M6 tapped mounting hole allows the detector be fixed in place. The 37-type standard housing allows other SRT-M37 type accessories to be attached using the SRT-M45/37-B adapter for radiance or intensity measurements.

Traceable Calibrations

Calibration of irradiance in W/m^2 and/or W/cm^2 as well as the detector's

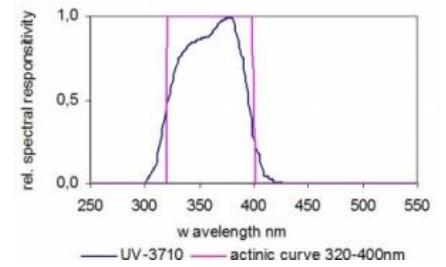



Typical Spectral Responsivity










relative spectral responsivity is performed at Gigahertz-Optik's Calibration Laboratory. Besides the regular calibration with spectral broadband reference lamps alternative calibrations with monochromatic or custom type reference lamps can be supplied as an option. The calibration and its traceability are confirmed in the calibration certificate supplied with each detector.



Specifications

Calibration	
Calibration	<p>a) Integral irradiance sensitive calibration in $A/(W/m^2)$ and $A/(W/cm^2)$ of the UV-3710 light detector. Calibration certificate. Including spectral sensitivity calibration. Calibration uncertainty = 5%</p> <p>b) Calibration of the spectral irradiance sensitivity in $A/(W/m^2nm)$ and $A/(W/cm^2nm)$ of an UV-3701 detector. Calibration of the relative spectral sensitivity from 320 nm to 400 nm in 10 nm steps scaled absolute at 365 nm. Calibration certificate.</p>
Specification	
spectral responsivity	UV-A (320 - 400) nm
typical responsivity	7 nA/(W/m ²)
Max. signal current	100 µA
Input optics	11 mm Ø diffusor window (cosine corrected FOV)
Housing	37 mm Ø, 32 mm height
Mounting	side M6 thread hole
Connector	coaxial cable 2 m Long, with BNC (-1), calibration data (-2) or ITT (-4) connector
temperature range	(5 - 40) °C
min. signal current	depends on optometer

Configurable with

Produktname	Product Image	Description	Show product
P-9710		<p>High-quality device for measurement of CW-, single pulse and modulated radiation.</p> <p>Features: Optometer for all detector heads with calibration data plug. Measurement modes: CW, pulse energy, dose, peak-to-peak, effective luminous intensity (Blondel-Rey), data logger, battery, main power, RS232</p>	http://www.gigahertz-optik.de/en-us/product/P-9710
X1		<p>Four-channel USB optometer designed for mobile use.</p> <p>Features: Compact device for use with all photometric, radiometric, colorimetric, plant-physiologic and photo-biologic measurement heads from Gigahertz-Optik. USB interface. Battery operation or power supply USB.</p>	http://www.gigahertz-optik.de/en-us/product/X1

Produktname	Product Image	Description	Show product
X1-RM		<p>Optometer in 3HE housing for use in 19" racks.</p> <p>Features: Its USB and RS232 remote interface and two additional RS232 device interfaces make the device highly flexible when it comes to system integration. Its four signal inputs enable use with all photometric, radiometric, colorimetric, plant-physiologic and photo-biologic measurement heads from Gigahertz-Optik.</p>	http://www.gigahertz-optik.de/en-us/product/X1-RM
X1-PCB		<p>Optometer module.</p> <p>Feature: The X1 optometer is available as a printed circuit board either with or without a housing and is suited for applications that do not require a keyboard or display. Four signal inputs enable connection with all measuring heads from Gigahertz-Optik.</p>	http://www.gigahertz-optik.de/en-us/product/X1-PCB
P-2000		<p>Two-channel optometer.</p> <p>Features: For use with most photometric and radiometric detectors supplied by Gigahertz-Optik. Modes: CW, pulse energy from both single and multiple flashes, effective luminous intensity (Blondel-Rey), data logger and others.</p>	http://www.gigahertz-optik.de/en-us/product/P-2000
P-9801		<p>Eight-channel optometer.</p> <p>Features: State-of-the-art 8 channel laboratory optometer with a signal amplifier and sample & hold ADC per channel for clocked recording of the measurement signals. RS232 and IEEE488 interface. Trigger input and output.</p>	http://www.gigahertz-optik.de/en-us/product/P-9801
P-9802		<p>Light meter for laboratory use with up to 36 measurement heads.</p> <p>Features: For use with up to 36 photometric and/or radiometric measurement heads. RS232 interface.</p>	http://www.gigahertz-optik.de/en-us/product/P-9802
TR-9600		<p>High-speed 1µs or 100ns rise time data logger optometer.</p> <p>Features: Laboratory device for recording of clocked intensity progress readings in single light flashes, flash sequence or modulated light. Calculation of pulse data e.g. peak intensity, pulse length, pulse half width, pulse energy and pulse repeat rate, etc.</p>	http://www.gigahertz-optik.de/en-us/product/TR-9600
P-9202-4		<p>Fast response time trans-impedance signal amplifier.</p> <p>Features: High quality analogue amplifier with current-voltage conversion. Minimal diode offset voltage for short circuit operations. Bandwidths of up to 330kHz. 1µs rise time. Large I-U amplification range from 10pA/V to 1mA/V.</p>	http://www.gigahertz-optik.de/en-us/product/P-9202-4
P-9202-5		<p>Universal trans-impedance signal amplifier.</p> <p>Features: High quality analogue amplifier with current-voltage conversion. Minimal diode offset voltage (1mV) for short circuit photodiode operations. 5µs to 20ms rise time depending on the amplification. Large I-U amplification range – 1×10⁻¹⁰A/V to 1×10⁻³A/V.</p>	http://www.gigahertz-optik.de/en-us/product/P-9202-5
P-9202-6		<p>Highly sensitive trans-impedance signal amplifier.</p> <p>Features: High quality analogue amplifier with current-voltage conversion with minimal diode offset voltage (0.5mV) for short circuit photodiode operation of . 2.5s to 25s rise time depending on the amplification. Large I-U amplification range – 1×10⁻¹¹A/V to 1×10⁻⁴ mA/V.</p>	http://www.gigahertz-optik.de/en-us/product/P-9202-6

Produktname	Product Image	Description	Show product
X1-2		<p>Four-channel RS232 optometer designed for mobile use.</p> <p>Features: Compact device for use with all photometric, radiometric, colorimetric, plant-physiologic and photo-biologic measurement heads from Gigahertz-Optik. USB and RS232 interface. Battery operation or power supply USB.</p>	http://www.gigahertz-optik.de/en-us/product/X1-2
X1-PCBC		<p>Optometer module.</p> <p>Feature: The X1 optometer is available as a printed circuit board either with or without a housing and is suited for applications that do not require a keyboard or display. Four signal inputs enable connection with all measuring heads from Gigahertz-Optik.</p>	http://www.gigahertz-optik.de/en-us/product/X1-PCBC

Purchasing information

Article-Nr	Modell	Description
Product		
15296529	UV-3710-1	Detector head with -1 connector, calibration certificate.
15297118	UV-3710-2	Detector head with -2 connector, calibration certificate.
15297119	UV-3710-4	Detector head with -4 connector, calibration certificate.
Calibration		
15307262	K-UV3710-SD	Calibration of the spectral irradiance sensitivity in $A/(W/m^2)$ and $A/(W/cm^2)$ of an UV-3701 detector. Calibration of the relative spectral sensitivity from 320 nm to 400 nm in 10 nm steps absolutely scaled with sampling point at 365 nm. Calibration certificate.
15300577	K-FOV	Calibration of the F.O.V
Re-calibration		
15300171	K-UV3710-I	Integral irradiance sensitive calibration in $A/(W/m^2)$ and $A/(W/cm^2)$ of the UV-3701 light detector. Calibration certificate.
15300571	K-UV-SR	Re-calibration of the relative spectral responsivity.